


Recessed Permanent Wood Housing Construction

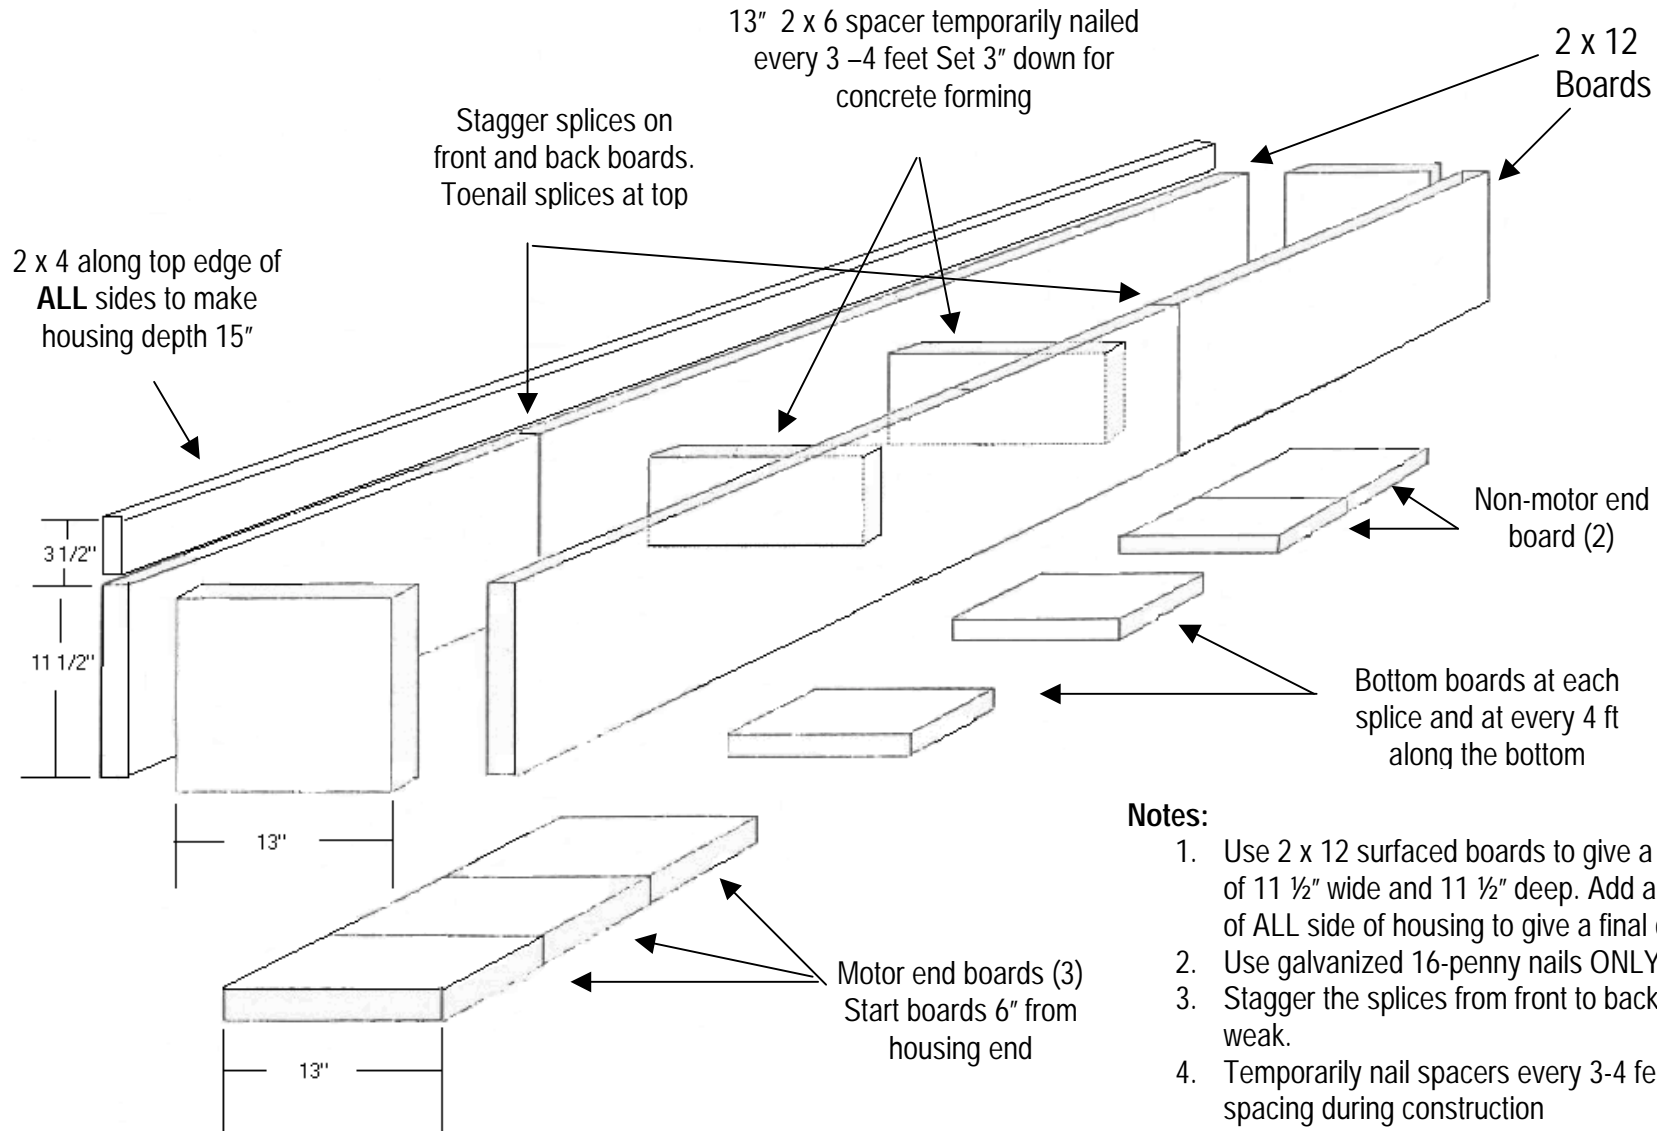

Notes:

1. Use 2 x 12 surfaced boards to give a final inside dimension of 11 1/2" wide and 11 1/2" deep. Add a 2x4 to the top edge of ALL side of housing to give a final depth of 15".
2. Use galvanized 16-penny nails **ONLY**
3. Stagger the splices from front to back of the housing will be weak.
4. Temporarily nail spacers every 3-4 feet to maintain proper spacing during construction
5. Bottom boards must be nailed to equally overlap each splice of sideboards
6. The housing should be built 4 feet longer than guide space. This formula works and is easy to calculate.
7. Nail mechanism mounting boards 6" from the inside of the housing so that drainage is easily installed.